



DJ PROMIXER



COMPATIBLE HARDWARE



CITRONIC MPCD-X3 MIDI IMPLEMENTATION

HOW TO SET UP?

The system must recognize your Citronic MPCD-X3 as MIDI Device before configuring in DJ ProMixer.

IMPORTANT: Install the drivers provided for the manufacturer and check [this configuration](#) to install your device

MIDI MAP



- 1.- PLAY / PAUSE
- 2.- CUE
- 3.- CUP (CUE & PLAY)
- 4.- CHANGE FOCUS PLAYLIST / GROUPS-SUBGROUPS / EXPLORER
- 5.- TRACK SCROLL / PUSH (LOAD)
- 6.- FOLDER SCROLL / PUSH (OPEN-CLOSE)
- 7.- REVERSE
- 8.- MANUAL LOOP (IN – OUT – EXIT / RELOOP)
- DIRECT AUTO LOOP (IN / EXIT) (STARTS IN 4 BEATS)
- 9.- AUTOLOOP FROM ¼ TO 32 BEATS (STARTS IN 4 BEATS)
- 10.- SELECTOR AUTOLOOP (FROM ¼ TO 32 BEATS) / FX BEAT (FROM 1/8 TO 2/1)
- 11.- SELECTOR AUTOLOOP / FX BEAT << MOVE DOWN / MOVE UP>>
- 12.- WHEEL MODE (SCRATCH, SEARCH, FX)
- 13.- CHANGE TEMPO RANGE (4%, 8%, 10%, 12%, 16%, 32%)
- 14.- KEYLOCK
- 15.- PITCH
- 16.- PITCH BEND
- 17.- SYNC
- 18.- MEMORIZE CUE / LOOP POINT
- 19.- DELETE CUE / LOOP POINT
- 20.- SAMPLE MODE ACTIVATED
- 21.- CUE LOOP MEMORY (1 TO 4) (NORMAL MODE) / SAMPLES (1 TO 4) (SAMPLE BUTTON ACTIVATED)
- 22.- BEND (WHEEL)
- 23.- SCRATCH (WHEEL)
- 24.- EFFECTS (ECHO, FLANGER, WAH)
- 25.- DECK SELECTOR (DECK A / DECK B)
- 26.- LINK TO PC

More info about DJ ProMixer:

<http://www.djpromixer.com>