



DJ PROMIXER



COMPATIBLE HARDWARE



PIONEER DDJ ERGO AUDIO & MIDI

HOW TO SET UP?

The system must recognize your Pioneer DDJ- ERGO as Audio and MIDI device before configuring in DJ ProMixer.

Pioneer DDJ Ergo requires download and **install Pioneer Asio Driver** and also **udgrade your firmware**.

Open DJ ProMixer and go to "**Config**" and open "**Audio Setup**", here you can select your Pioneer DDJ-ERGO as Audio Sound Card.

AUDIO SET UP






For Internal Mode choose your output (1.- for ¼ TSR connectors or 2.- for RCA)

Important: Pioneer DDJ -ERGO is designed to be used as internal mode (with internal Sound Card), but you can use also with DJ ProMixer as external mode (with other/s Sound Card/s and external mixer).

MIDI SET UP

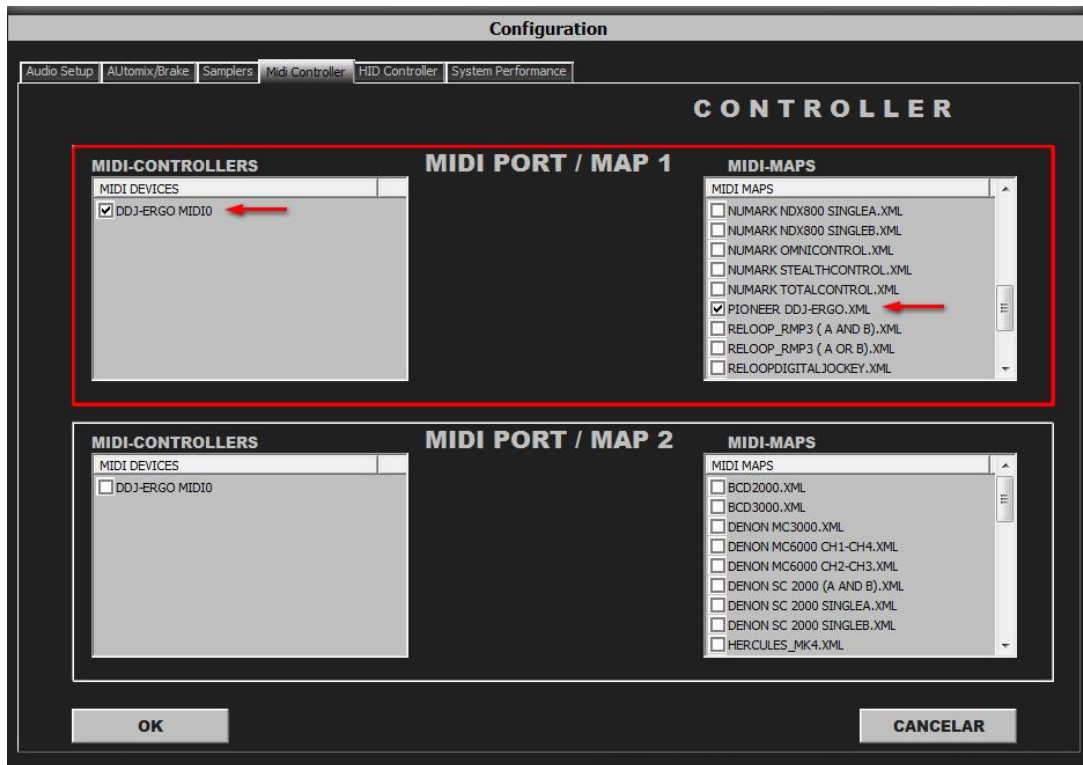

In "Config" go to "MIDI Controllers" and then select in MIDI PORT / MIDI MAP 1 on the left side one device (DDJ ERGO MID) and select on the right side PIONEER DDJ-ERGO.XML.
MIDI PORT / MIDI MAP 2: Nothing Selected.

MIDI MAP

Overview



Detail



- 1.- PLAY / PAUSE
- 2.- CUE
- 3.- MANUAL LOOP (IN – OUT)
- 4.- AUTOLOOP FROM ¼ TO 32 BEATS (STARTS IN 4 BEATS) PUSH: 1.- AUTO MODE: IN EXIT / RELOOP IN 2.- MANUAL MODE: EXIT / RELOOP IN
- 5.- VINYL MODE
- 6.- KEYLOCK
- 7.- EFFECTS DIRECT BUTTONS (1, 2, 3) (ON DISABLED)
- 8.- SAMPLER DIRECT BUTTONS (1, 2, 3, 4)
- 9.- CUE / LOOP MEMORY DIRECT BUTTONS (1,2,3,4)
- 10.- FX SYNC (FROM 2/1 TO 1/8 BEATS)
- 11.- FX DRY / WET
- 12.- FX PARAMETER
- 13.- SAMPLER VOLUMEN
- 14.- TRACKLIST SCROLL
- 15.- LOAD DECK
- 16.- REC
- 17.- PFL
- 18.- ROTARY KNOBS OF THE MIXER (GAIN, HI, MID,BASS)
- 19.- DECK'S VOLUMEN CONTROLS AND CROSSFADER
- 20.- PITCH
- 21.- SYNC
- 22.- BEND
- 23.- SCRATCH
- 24.- SHIFT (SHIFT+VINYL=BRAKE)

More info about DJ ProMixer:

<http://www.djpromixer.com>