



DJ PROMIXER



COMPATIBLE HARDWARE



**NUMARK MIXTRACK / PRO
AUDIO & MIDI
NEW MIDI MAP (REMAPPED)**

HOW TO SET UP?

 
The system must recognize your Numark Mixtrack / Pro as Audio Device (only Mixtrack Pro) and MIDI Device (for booth models) before configuring in DJ ProMixer.

MIXTRACK PRO has two different configurations (for *Internal* or *External Mode*):

Open DJ ProMixer and go to "**Config**" and open "**Audio Setup**", here you can select your Mixtrack Pro as Audio Sound Card.

AUDIO SETTINGS

INTERNAL MODE (Master + Headphones)

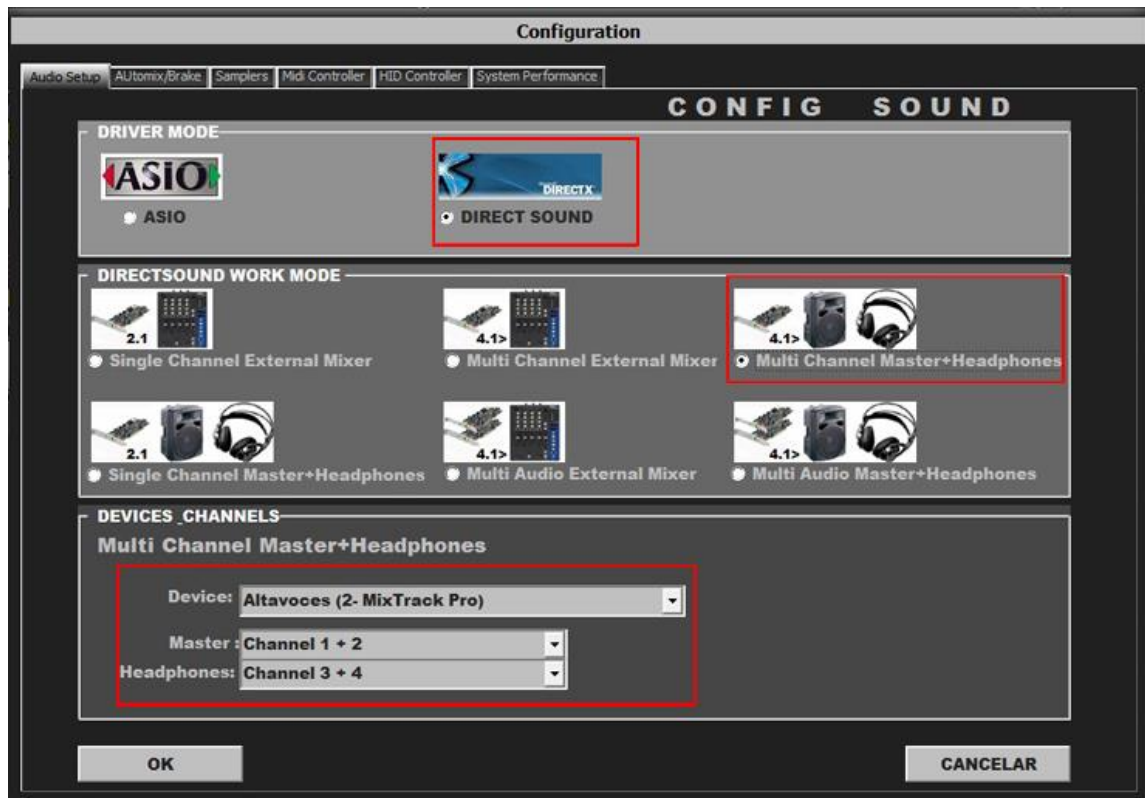




For Internal Mode connect your output in (1) RCA connectors (L+R) for Master Output.

Connect your headphones in front (¼ TSR stereo connector)

 EXTERNAL MODE (Deck A + Deck B connected to external mixer)

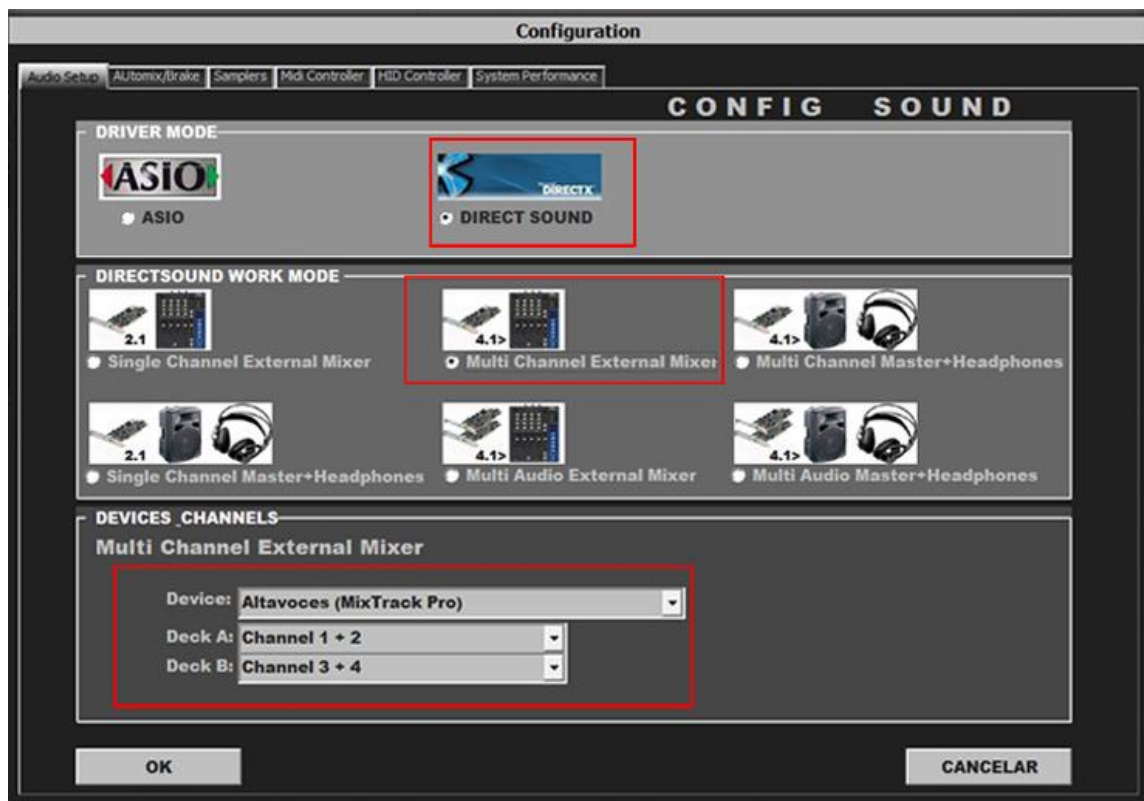


For External Mode connect your outputs 1.- RCA connectors (L+R) for Deck A, and 2.- RCA connectors (L+R) for Deck B.

Important: Numark Mixtrack Pro is designed to be used as internal mode (with internal Sound Card using master output & headphones) or external mode (using the internal soundcard for each deck).

Numark Mixtrack have not soundcard, it's only MIDI Controller.

 MIDI CONFIGURATION

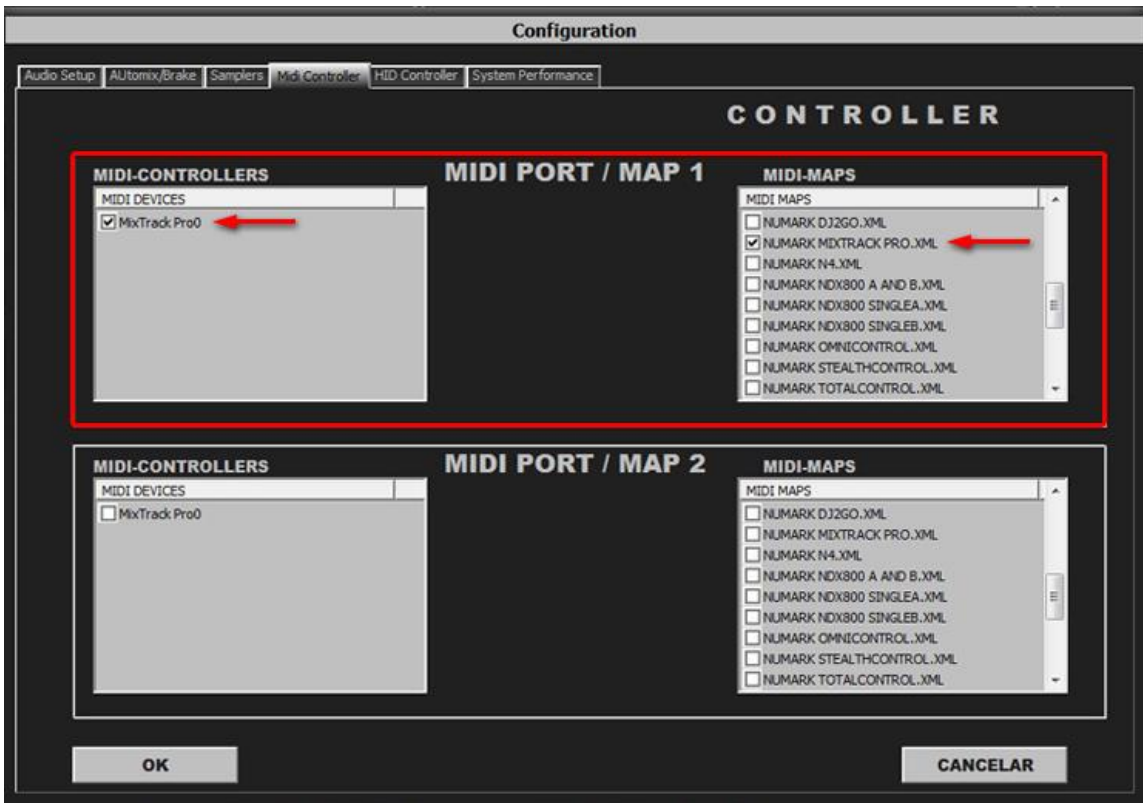

In "Config" go to "MIDI Controllers" and then select in MIDI PORT / MIDI MAP 1 on the left side one device (MixTrack Pro) and select on the right side NUMARK MIXTRACK PRO.XML.
MIDI PORT / MIDI MAP 2: Nothing Selected.

MIDI MAP

Overview



Detail



- 1.- PLAY / PAUSE
- 2.- CUE
- 3.- SELECTOR OFF : MANUAL LOOP (1.- IN 2.- OUT 3.- EXIT / RELOOP)
- 4.- SELECTOR ON: AUTOLOOP FROM ¼ TO 32 BEATS (STARTS IN 4 BEATS)(1.-MOVE DOWN
2.- IN EXIT / RELOOP IN 3.-MOVE UP)
- 5.- SELECTOR ON: MEMORY CUE/LOOP (1,2,3)
- 6.- SELECTOR ON: FX 1, FX 2, FX 3
- 7.- STUTTER
- 8.- KEYLOCK
- 9.- ENABLE WHEEL VINYL MODE
- 10.- FX SYNC (FROM 2/1 TO 1/8 BEATS)
- 11.- FX DRY / WET
- 12.- FX PARAMETER
- 13.- FOLDER / FILES SELECTOR
- 14.- TRACKLIST SCROLL
- 15.- LOAD DECK
- 16.- BEND (BUTTONS)
- 17.- PFL
- 18.- ROTARY KNOBS OF THE MIXER (HI, MID,BASS)
- 19.- DECK'S VOLUMEN CONTROLS AND CROSSFADER
- 20.- PITCH
- 21.- SYNC
- 22.- BEND (WHEEL)
- 23.- SCRATCH

SELECTORS DETAIL

NEW MIDI MAP

SELECTORS DETAIL



SELECT:

- 1.- **Delete On:**
Enable Memory
or **Effect On:**
Enable FX buttons
and FX rotary knobs
- 2.- **Loop Selector**
Loop Off : Manual
Loop On : Auto

NEW SELECTOR'S FEATURES:

In this new MIDI Map there are included three buttons as "Selectors":

- 1.- "Delete" and "Effects" buttons are connected for enable "Hot Cue" buttons (1,2,3)
When "Delete" button is **turn on** it enables **Memory CUE /loop** for FX Buttons, when is **turn on** "Effects" it enables **Effects (FX1, FX2, FX3)**.
- 2.- "Manual" button when is **turn off** it enables **Manual Loop** (In, Out, Exit/Reloop), when is **turn on** it enables **Auto Loop** (Move Down, In / Out /Exit / Reloop, Move Up).

NEW FOLDER / FILES SELECTOR

Back Button select Folder / Files into the Browse.

More info about DJ ProMixer:

<http://www.djpromixer.com>